FIRESTONE LIVING

INSTALLATION & SETUP GUIDE

FireStone Living Freestanding Electric Fireplace Stove



Freestanding electric fireplace stove

AVAILABLE OPTIONS

Black

Read all instructions before installing. Save these instructions.

For use in the United States · 120 V AC · Supplemental heat

© FireStone Living — Customer Care via the Contact page of our website

01 Before you begin

What's in the box

- Electric fireplace stove
- Remote control
- Manufacturer's user manual

> **NOTE** Unpack everything on a soft, clean surface and check every part before you start. Keep the packaging until the product is installed and working. If anything is missing or damaged, contact us before installing.

Tools you'll need

- No tools needed
- Scissors or a box cutter to open the carton

02 Specifications

Specification	Value
Height	33.78 in
View	Arched front door + 2 side windows
Heat output	750 W / 1500 W (up to 5,118 BTU), fan-forced
Heating area	Supplemental heat up to 400 sq. ft.
Flame effects	Multicolor LED flame, adjustable brightness
Thermostat / timer	Built-in
Controls	Remote (power, heat, timer, dimmer)
Noise	Under 45 dB
Storage	Open log/décor compartment below the firebox
Safety	Overheat protection, tip-over switch, flame-retardant materials

03 Important safety instructions


- Read this guide **and** the manufacturer's manual included in the box before installing or using the product. Keep both for future reference.
- This heater is hot when in use. Keep furniture, pillows, bedding, papers, clothing and curtains **at least 3 ft (0.9 m) from the front** of the unit, and keep them away from the sides and back.
- Use extreme caution when the heater is used near children, pets or anyone who cannot react to heat. Never leave the heater running unattended.
- Plug the unit **directly into a wall outlet**. Never use an extension cord or a power strip.
- Never run the power cord under carpets or rugs, and keep it away from walkways where it could be tripped over or pinched.
- Never block or cover the air intake or the hot-air outlet, and never insert objects into any opening.
- This stove has a tip-over safety switch: it shuts off automatically if it is tilted or knocked over. Always stand it on a flat, stable floor.
- Do not use outdoors, in bathrooms, laundry rooms or other damp areas, or anywhere the unit could come into contact with water.
- Do not use where gasoline, paint or other flammable liquids are used or stored.
- Never operate the unit with the glass front removed, cracked or broken.
- Do not use the unit if the cord or plug is damaged, or after it has been dropped or has malfunctioned. Contact our support team.
- Always switch off, unplug and let the unit cool before moving, cleaning or servicing it.
- Do not modify the unit. Use only the parts supplied with it.
- This product provides **supplemental heat**. It is not designed to be the primary heat source of your home.

WARNING Keep these instructions. Pass them on to anyone who uses the product or to any future owner.

04 Planning your installation

Choosing the location

- Stand the stove on a flat, level, hard floor. Do not use it on thick carpet, a bed or any soft surface that could block the air openings.
- Keep **3 ft (0.9 m) clear in front** and leave space on the sides and back for air circulation.
- Place it near a wall outlet so the cord reaches without stretching and does not cross a walkway.
- Keep it away from curtains, bedding and anything that could fall onto it.

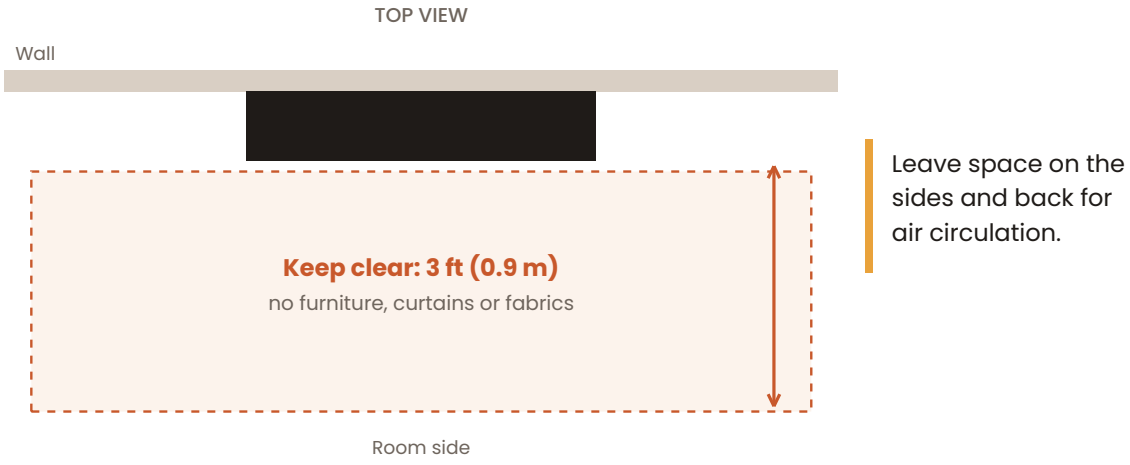

Electrical requirements

- A standard **120 V AC, 15 A grounded outlet** (3-prong). At 1500 W the unit draws about 12.5 A.
- Use a circuit that is not shared with other high-power appliances (space heaters, microwaves, hair dryers). A dedicated circuit is best and prevents nuisance breaker trips.
- Plug directly into the wall outlet. No extension cords, no power strips.
- Any new outlet or wiring must be installed by a licensed electrician in accordance with the National Electrical Code (ANSI/NFPA 70) and local codes.

05 Setting up

Setting up your stove

1. Open the carton and lift the stove out with both hands from underneath — never by the door or the glass.
2. Remove all packing material, including any foam or film inside the firebox and on the glass.
3. Check the glass and the door for damage before going further.
4. Stand the stove on a flat, level, hard floor, respecting the clearances on the previous page.
5. Plug it directly into a wall outlet.
6. Insert the batteries in the remote (remove the insulating tab if one is fitted).
7. Switch on the flame, then test each heat setting.

> **NOTE** If the stove switches off when you move it, the tip-over switch has activated. Set it upright on a level floor and switch it back on.

> **TIP** Many of our stoves have a working door. You can open it to wipe the inside of the glass, but always switch off and unplug first.

06 Controls and first use

You can operate this product with the remote control (power, heat, timer and dimmer buttons).

Feature	How it works
Heat settings	750 W / 1500 W (up to 5,118 BTU), fan-forced. Choose the low setting for mild weather and the high setting for colder days.
Flame only	The flame effect runs independently of the heater, so you can enjoy it all year without heat.
Thermostat	Built-in thermostat. The heater turns itself on and off to hold the temperature you set. If the room is already warmer than the setting, the heater stays off — this is normal.
Timer	built-in: the unit switches off automatically when the time is up.

Remote control

- Before first use, fit the batteries. If a clear plastic tab sticks out of the battery holder, pull it out.
- Point the remote at the front of the fireplace and press the buttons slowly, one at a time.
- If the unit has a main power switch, it must be ON for the remote and the panel to work.
- Keep batteries away from children. If a battery is swallowed, seek medical help immediately. Never mix old and new batteries.

First use

- A slight, harmless odor is normal the first time the heater runs. It disappears after a short time.
- When you switch the heater on or off, the fan may blow cool air for a moment. This is normal: it protects the heating element.
- If the unit has been stored in the cold, let it reach room temperature before switching it on.

07 Troubleshooting

Problem	What to do
The unit does not turn on	Check that it is plugged in and that the main power switch (if your model has one) is ON. Check the circuit breaker. Test the outlet with another appliance.
The remote does not work	Check the batteries and their orientation, remove the insulating tab, point at the front of the unit and press slowly.
Flame works but no heat	Select a heat setting. Check the thermostat is set above the current room temperature.
The heater stops during use	The overheat protection has tripped. Make sure no opening is blocked, unplug for 10 minutes, then switch on again.
The breaker trips	The circuit is overloaded. Move other appliances to another circuit, or have an electrician add a dedicated circuit.
Cool air blows when switching on or off	Normal: the fan protects the heating element.
Slight odor	Normal on first use or after a long period without use.
The stove switches off when moved	The tip-over switch activated. Stand it on a level floor and switch on again.
Anything else	Unplug for 10 minutes to reset the unit. If the problem continues, contact us — do not open the unit.

08 Care and support

Cleaning and care

- Always switch off, unplug and let the unit cool before cleaning.
- Dust the glass with a clean, dry cloth. Remove fingerprints with a slightly damp cloth, then dry with a lint-free cloth. Never use abrasive cleaners.
- Dust the air openings regularly with a soft brush or a vacuum on low power. Dust build-up can cause overheating.
- Have the unit inspected at least once a year, and before use if it has been stored.
- When storing the unit off-season, keep it in its original carton in a dry place.

Need help?

Our FireStone Living customer care team is here to help with installation questions, missing parts or anything that does not work as expected. Contact us through the **Contact** page on our website and include your **order number**, the **product name** printed on the first page of this guide, and a photo if relevant.

This guide is provided by FireStone Living to help you install and enjoy your product. It complements, and does not replace, the manufacturer's user manual included in the box. Always follow the safety instructions and the specific procedures in that manual; if anything in this guide differs from it, the manufacturer's manual takes precedence. Electrical work must be carried out by a licensed electrician in accordance with the National Electrical Code and local regulations.